


Directions:

Clip around channel on right side of radiator
Fasten $\frac{1}{4}$ turn fasteners around channel on left side.

Caution: If temperature light comes on remove immediately and replace when engine has cooled.

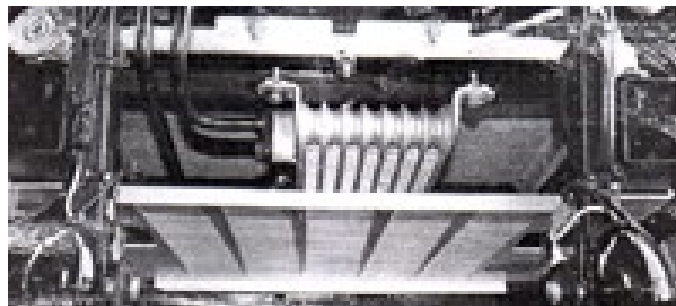

Directions:

Clip around channel on right side of radiator
Fasten $\frac{1}{4}$ turn fasteners around channel on left side.

Caution: If temperature light comes on remove immediately and replace when engine has cooled.

