

EK406 Instructions for JStrong Polaris Ranger Sheet (2) 2003-2008 Instructions

Parts List: (See FIG 3)

12- Self drilling screws
2- Rear Fillers

Tools Needed:

5mm Wrench
Slotted Screwdriver



Toll Free 1-877-444-4147
www.Jstrongindustries.com



Step 5a:


Assemble fillers behind roll cage as shown in Fig 4 and photograph Fig 5 with (6) self drilling screws provided.

Step 5b:

Note the rear clamp position is reversed on this model Rangers. They will be positioned in rear of the bar.

Step 5c:

Continue to Step 6 page 1 of instructions..

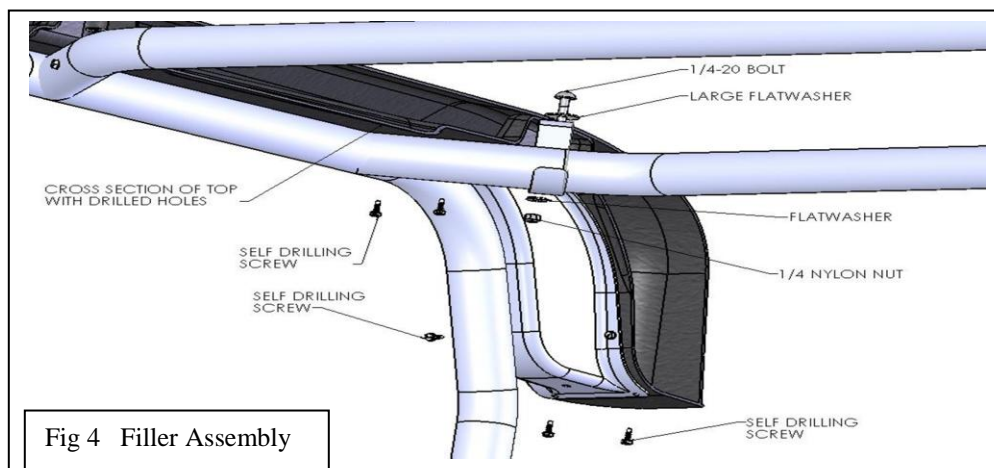

Warning: Disclaimer: Under no circumstances will JStrong Industries or their parent companies accept liability for incidental or consequential damages. JStrong reminds you extreme care should be taken when operating a motorized vehicle and should only be operated by qualified, experienced operators.