

## Parts List

1-Right Door hinge bracket  
1-Left Door hinge bracket  
2-Left hinges (1-male and 1-female)  
2-Right hinges (1-male and 1-female)  
2-2" Stainless Strike plates  
8-1/4" X 1/2" Button head allen screws  
8-1/4" X 1" Button head allen screws  
16-1/4" Lock nuts  
16-1/4" Flat Washers  
4-Self tapping screws  
2-Universal Door Panels (ABS)

## Tools

7/16 Wrench & Socket  
5/32 Allen wrench  
14mm Wrench & Socket



Toll Free 1-877-444-4147  
www.jstrongindustries.com



1-Door hinge bracket



1-Male/Female Hinge Set





Strike Plates

## Step 1

Bolt male half of the hinge to door hinge bracket using the 4- 1/4" X 1/2" button head allen screws as shown in (Fig A) The hinge must slide into the notch, do not place it on the front of the door hinge bracket.

**\*\*Caution\*\* Do not tighten at this time.** Mount front door hinge bracket to existing front upper roll cage bolts. (This requires removal of nuts only.) Attach bottom of door hinge bracket with self tapping screws. Make sure bracket is flush with roll bar as shown in (Figure B).

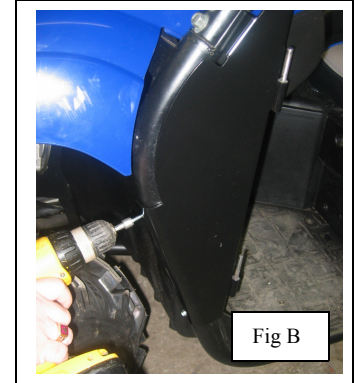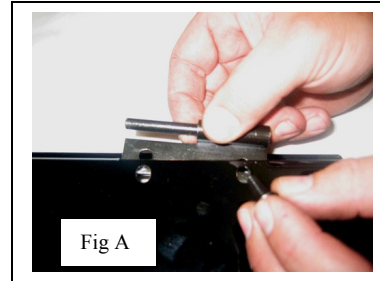

## Step 2

Remove rear upper roll cage bolts and reinstall with strike plate as shown in (Figure C)



## Step 3

Mount door latch as shown in (Fig D) with supplied screws.




## Step 4

Slide female hinges on hinge pins. (Figure E) Place the door in the opening. Align the latch with the center of the strike plate. (\*\*Note: In some cases, removal of the seat grab handle may be required to allow door to fit flush with roll cage..)

**\*\* Caution\*\* Make sure there is sufficient amount of latch bolt contacting the strike plate. (Figure D)**

Make sure that sufficient space has been left for clearance of the door swinging outward. Use 4-1/4" X 1" button head allen screws, washers and nuts to attach the door to the female hinge, placing the washer on the interior of the door. Tighten all hinge screws at this time. Peel backing off foam arm rest cover and place on top of door arm rest.

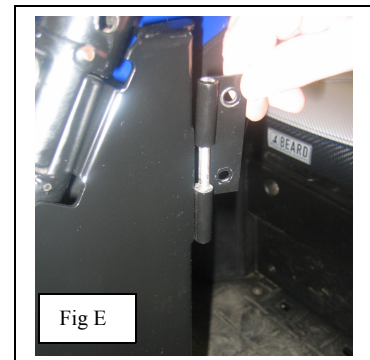

**Repeat steps 1-4 for the other door and installation will be complete!**

**Warning: These are in no way intended to be a passenger restraint. Seatbelt should always be worn. Keep hands and feet in vehicle at all times. Use at your own risk.**