

Teryx Top mounting Instructions EK 306



www.jstrongindustries.com
Toll free 877-444-4147

Parts List

2-5/16" x 1" bolts
2-5/16" x 2 1/4" bolts
4-5/16 Locknuts
4-5/16" flat washers
2-mount brackets

Tools Required

1/2" wrench
1/2" socket & ratchet
14mm wrench

Step 1

Remove top from box and check all the hardware with the above parts list. Remove the 2-14 mm bolts on the front of the crossbar of the Roll over protection bars & install the 2 brackets as shown in figure1. (note: Do not tighten at this point.)

Step 2

Place top on Roll over Protection bars with lights facing forward

Step 3

Align mount holes in the front as shown in Fig 2 and in the rear as shown in Fig 3.

Step 4

Place fender washer on the top of the roof and install the 5/16" x 2 1/4" bolt in the rear holes as shown in fig. 5.





Use the 5/16 x 1" bolt for the front mounting holes

Step 5

You are now ready to hook the electrical power up at this point. Hook the white wire (10 gauge) that is marked positive(+) on the battery. Hook the back (10 gauge) wire to the negative post on the battery. This completes the installation of your new JStrong stereo roof system. Tighten all bolts at this time.

Enjoy, and remember a recent quote from an intelligent 6 year old...

Bumpy trails leads to beautiful places! Be safe and keep Riding!

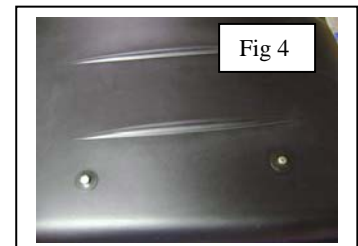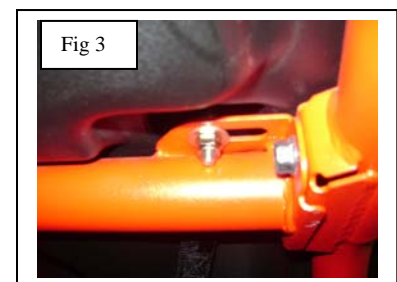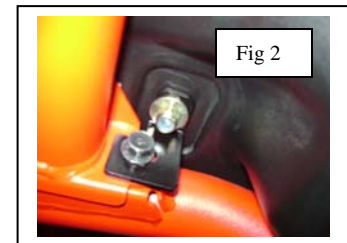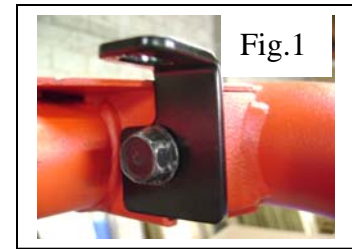

WARNING: Disclaimer: Under no circumstances will J.Strong Industries or their parent companies accept liability for incidental or consequential damages. J.Strong top are not applicable, nor should the top be considered as protection against rollover, collision or other accidents that may result. Extreme care should be taken when operating a motorized vehicle and should only be operated by qualified, experienced operators

