

Instructions for JStrong Ultra Sport Top




Toll Free 1-877-444-4147
www.Jstrongindustries.com

Parts List:

- 1-Ultra Sport Top
- 4- Brackets (2 front 2 rear)
- 4-Bolts
- 8-Washers
- 4-Rubber grommets
- 4-Spacers
- 4-Lock nuts

Tools Required

- 1-10 mm socket
- 1-8 mm allen wrench
- 1-4 mm allen wrench

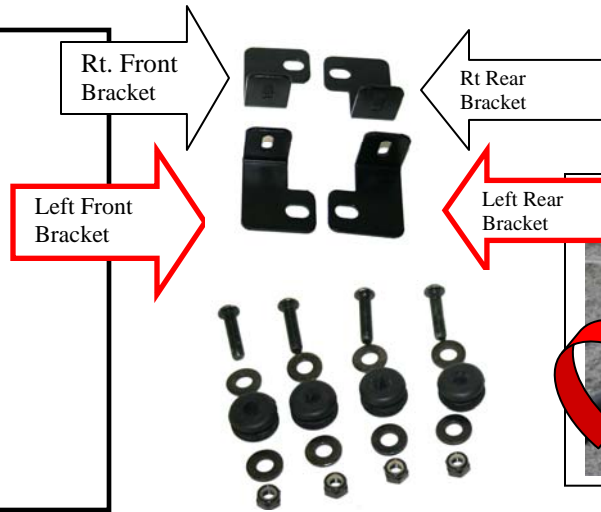

Grommets, washers, nuts & bolts

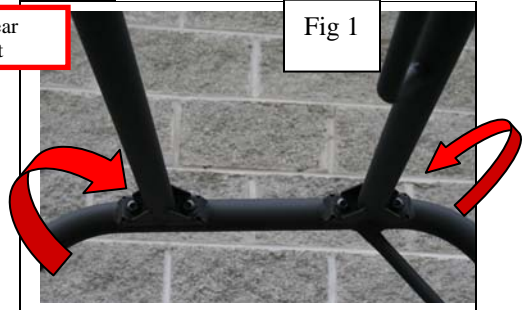


Fig 1



Fig 2



Fig 3



Fig 4



Fig 5

Top of Sport top

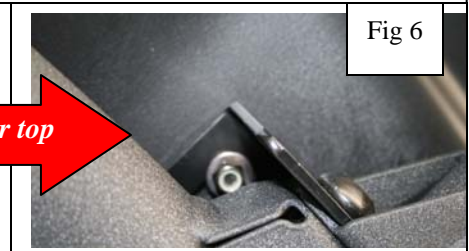


Fig 6

View of nut under top

Installation Instructions:

Step 1

Remove the front mount bolts from the roof frame and the rear bolts from the rear roof frame.(Fig 1)

Step 2

Install the brackets as shown in (fig 2.)

Step 3

Install the rubber grommets into the ultra sport tops pre-drilled holes. (fig 3.)

Step 4

Position the Ultra sport top on the roof frame, lining up the holes in the brackets (fig 4)

Step 5

Install a larger washer on to bolt and insert through the top of the Ultra Sport top and through the hole in the bracket.(fig 5) Secure with a washer and nut (fig 6) Do not completely tighten.

Step 6

Repeat for the remaining 3 brackets. Once all 4 brackets are installed make sure the Ultra sport top is centered and then tighten all bracket mounting bolts at this time. Torque: 4.3 ft. lb. (6Nm)

Check for tightness periodically.

Use a soft cloth and soap and water for cleaning.

Your installation is now complete!

